

## Remote Controller (EAS/FB8/H)

The Remote Controller is used to remotely arm or disarm the system, activate the panic alarm, and put the system in the "HOME" mode.

### ● Identifying the parts

**1**  **BUTTON**

Pressing this button will put the system into the Armed mode.

**2**  **BUTTON**

Pressing this button for 3 seconds will trigger the panic alarm regardless of whether the system is Armed or Disarmed.

**3**  **BUTTON**

Pressing this button will put the system into the Home mode.

**5**  **BUTTON**

Pressing this button will put the system into the Disarmed mode. If the alarm is sounding, pressing this button will stop the alarm.


**4** **TX INDICATOR**

When any of these four buttons are pressed, the TX LED will flash to indicate the Remote Controller has successfully sent out a signal to the Main Unit.

**6** **ON / OFF SWITCH**

The Remote Controller also has a power switch. This switch is designed to prevent false alarms. If you carry the Remote Controller on your person, be sure to have the power switch in the OFF position (down), and move the power switch to the ON position (up) before pressing a button.

**7** **BATTERY COMPARTMENT COVER**

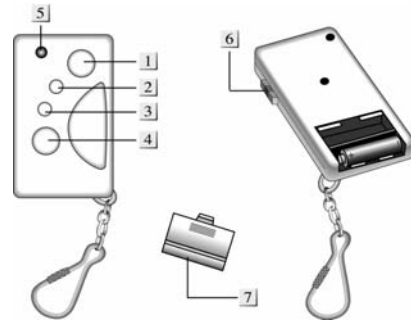

### ● Battery

The Remote Controller uses one 12V 35mAh alkaline battery as its power source.

The battery is good for approximately 2600 signal transmissions before it needs changing.

The low battery status will be sent to the Control Panel along with regular signal transmission, and, the Control Panel will display the status accordingly.

### ● Getting Started

- Slide off the battery cover
- Insert the battery with negative of the battery on the spring side, as shown below.
- Replace the battery cover
- Turn on the ON/OFF switch.
- Put the Control Panel into "Device +/-" menu and then select "Add Device" menu.
- Press any buttons on the Remote Controller.
- Please refer to the operation manual of your control panel under the section of "Device +/-" to complete learn-in process.

