


# GRÄSSLIN

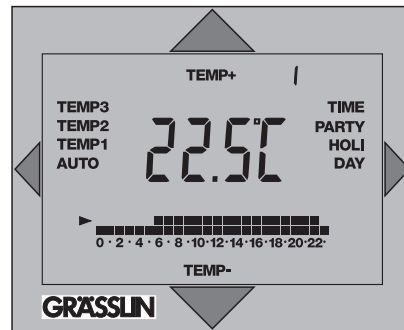

Ⓒ GB Operating instructions

Subject to technical  
modifications.  
Status 8/97


WA-EKF 3631/06.98/S:MMS/D:Bau/80.10.0813.7/97/00782

*famoso*  
..... 2000

1.	List of contents	2	6.7	AUTO mode	24
2.	Brief description	3	6.8	TEMP 3 mode	25
2.1	Elementary operator control	4	6.9	TEMP 2 mode	25
			6.10	TEMP 1 mode	25
3.	Installation	5	6.11	PARTY mode	26
3.1	Connecting up	6	6.12	HOLIDAY mode	27
3.2	Fitting / replacing the batteries	7 - 8	7.	System settings	28
4.	Setting the time / date	9	7.1	Parameter settings	29
4.1	Setting summertime / wintertime	10	7.2	Heating cycle - CDF value (cyclic duration factor)	30
4.2	Interrogating the current time	11	7.3	Heating cycle - setting the CDF value	31
5.	Temperature levels	12	7.4	Elapsed-hour meter	32
5.1	Changing temperature levels	13	7.5	RESET	33
			7.6	Recalling the factory settings	34
6	Overview of programmes and operating modes	14	7.7	Electronic interlock	35
6.1	Factory programme P1	15	7.8	Air-conditioning system	36
6.2	Factory programme P2	16	8.	Technical data	37
6.3	Factory programme P3	17	9.	Problems and remedies	38
6.4	Factory programme P4	18	10.	Cleaning and maintenance	39
6.5	Selecting factory programme P1 - P4	19	11.	Service addresses	39
6.6	Selecting / reading the user-defined programme	20	12.	Alphabetical subject-index	40
6.6.1	Entering a user-defined programme	21 - 22	13.	Overview	41 - 42
6.6.2	COPY function	23			

Shaded grey area is designed for end-user instruction

## Example: Factory program P1 - weekly overview

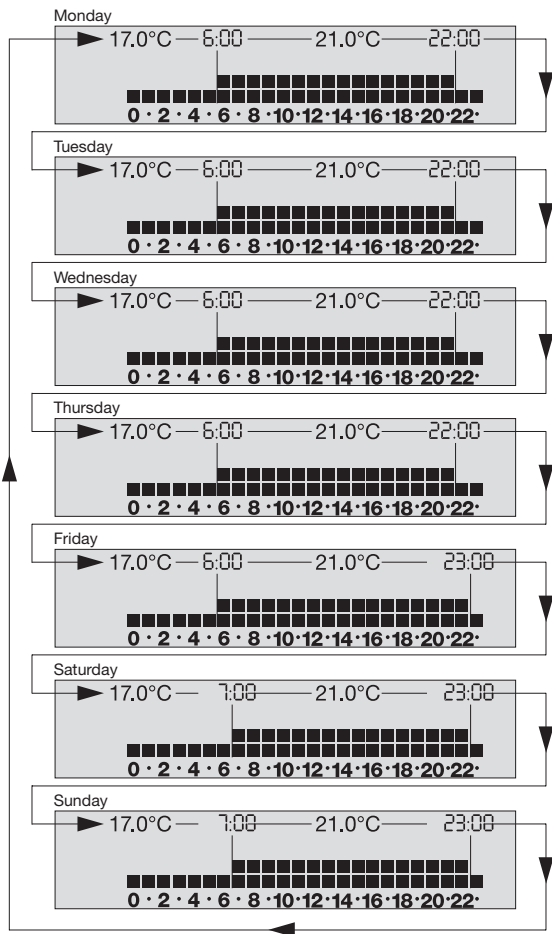

With its various programs and setting facilities, the famoso 2000 digital chronostat always ensures a comfortable room temperature.

The chronostat contains the following:

#### 4 factory programmes

The factory programmes are oriented to the calendar week and have been adapted to suit different ways of life.

#### 4 user-defined programmes

The 4 factory programmes can be edited to suit your specific requirements.

#### AUTOMATIC mode

The chronostat operates in accordance with one of the four factory programmes or the user-defined programme in this mode.

#### 3 continuous temperature modes

A single temperature is assigned to each of the continuous temperature modes. The programmed temperature is maintained until another mode is selected.

#### HOLIDAY mode


This mode remains active for the specified number of days and then returns to the previously selected programme.

#### PARTY mode

Switches to temperature level 3 (factory setting: 21 °C) for a three-hour period.

The battery-powered chronostat can be removed from its stand and programmed easily on a table or from the comfort of an armchair. Simply replace the chronostat on its stand when you have finished programming (refer to Page 5).

When entering the time for a change in temperature, please remember that the heating system requires a certain amount of time to adjust the temperature to the set value.

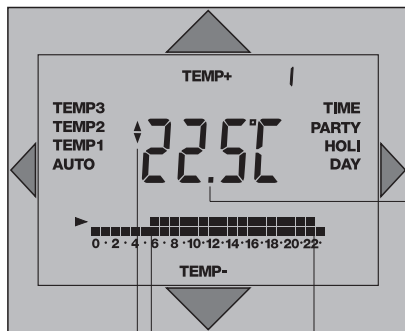

Your chronostat has been installed and the installation technician has programmed the programme of your choice to suit your specific requirements. Proceed as follows if you wish to change the temperature temporarily:

The display shows the current room temperature



Press the button on the display once and read the programmed temperature





Display for the set room temperature



Press the button on the display and enter the desired temperature

Times for the change in temperature

**The temperature specified by the programme is reactivated with the next temperature change.**

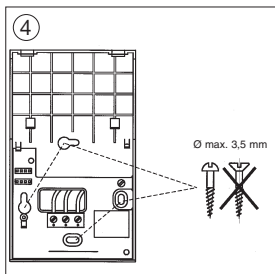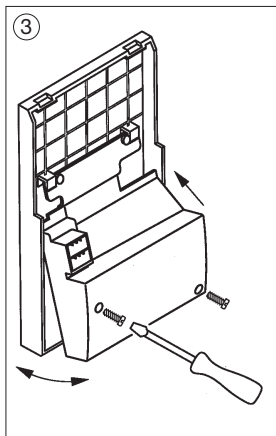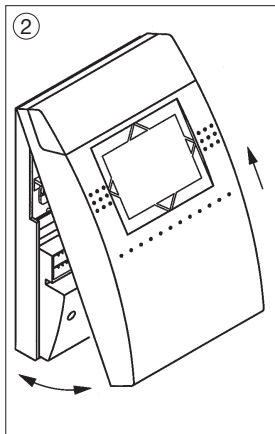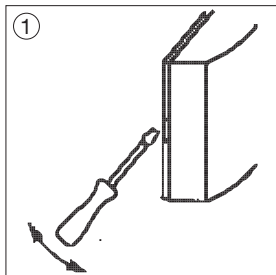

The chronostat must be fitted / installed with an appropriate amount of care by a suitably qualified electrician / technician.

Switch the heating system off before commencing installation!

Check and make sure that the connecting wires are not live.

**Refer to Page 28 for the system settings**

Lift the chronostat off the stand ①

Undo the screws


Remove the protective housing

Be careful not to damage the clips


Guide the connecting leads through the cut-outs in the stand

Mount the stand on a firm surface or a flush type box

The chronostat **must** be fitted / installed with an appropriate amount of care by a suitably qualified electrician / technician.

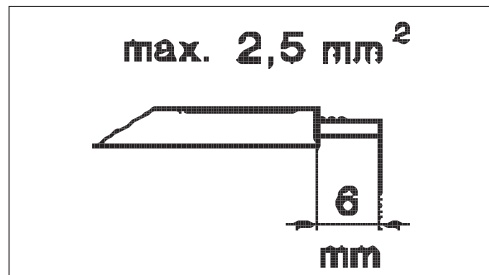

Strip the ends of the connecting wires carefully and connect up as shown on the circuit diagram

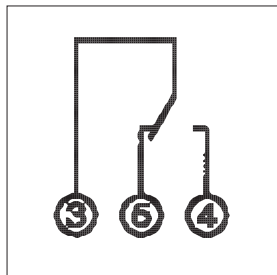


Contacts 3 - 4 closed =  
heating / coolingmode

Replace the protective housing


Be careful not to damage the clips

 Tighten the screws




Lift the Famoso 2000 chronostat off the stand

Remove the retaining strap

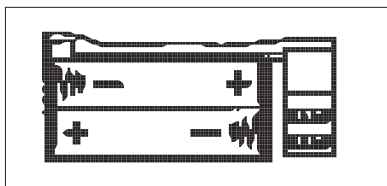

 Insert the batteries  
Battery type: LR 6 / AA (two)  
**(use only alkaline batteries)**



Replace the retaining strap, inserting the spring-loaded side first

Replace the chronostat on its stand - it must latch into place.

Conduct a RESET after fitting the batteries (after fitting for the first time only).




- Appears on the display

- Replace the batteries as soon as possible or the thermostat may cease to work properly.

- Data is stored for approx. 2 minutes when replacing the batteries

- Refer to Page 7

- Note: The unit measures the battery voltage when the heating / cooling system is switched on / off. The battery indicator will not change if the heating / cooling system is not switched on or off.

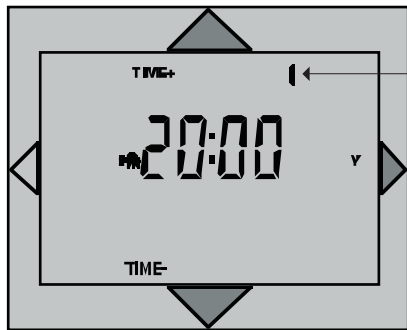

Press the **TIME** button once  
The time appears on the display

When setting for the first time during summer-time, press the **+/-1h** button once  
**+1h** appears on the display




Press the button and set the current time

DAY

Press the button and set the day of the week

The days of the week are displayed in the following format:  
1=Mo, 2=Tu, 3=We, 4=Th, 5=Fr, 6=Sa, 7=Su


Confirm the entered data:  
Press the **TIME** button once  
The unit returns to its AUTOMATIC programme sequence.

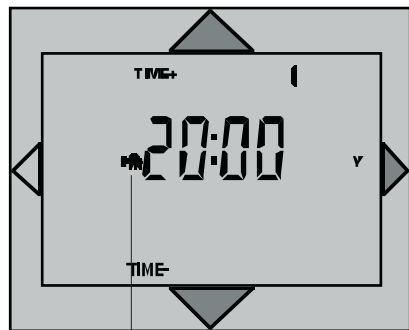

Press the **+/-1h** button and set summertime / wintertime

Displayed indicator  
 (+1h displayed for summertime; no indicator appears on the display during wintertime (normal time))

Please make sure that **+1h** is displayed during summertime.

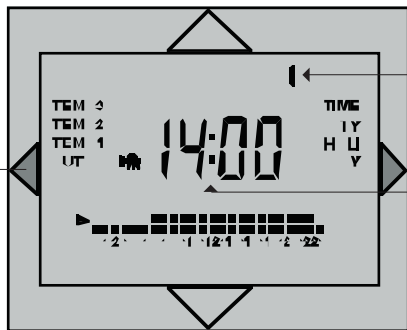

TIME

Press the **TIME** button 1x**TIME** flashes on the display


The current time appears on the display

The current day of the week appears on the display

The display returns to its original state automatically if no buttons are pressed for approx. 8 seconds

AUTO


Press the **AUTO** button  
The units returns to its automatic programme sequence

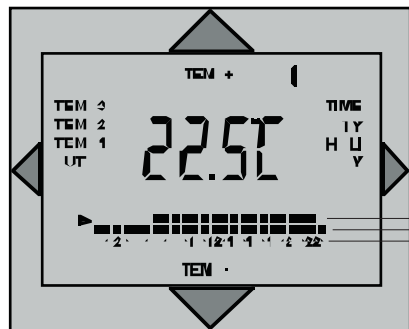

	Factory setting	Setting range
TEMP 3	21° C	18° C ... 35° C
TEMP 2	17° C	14° C ... 20° C
TEMP 1	5° C	5° C ... 16° C

**Note:**

The temperature measuring range is between 0°C ... 40°C. If the temperature is outside this range, --:°C will appear on the display instead of a temperature value.

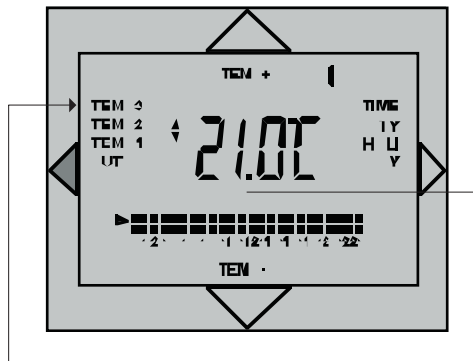

**AUTO** Press the **AUTO** button and select a temperature level

TEMP 3 21° C

TEMP 2 17° C

TEMP 1 5° C

(Factory settings)

The display starts flashing

The programmed temperature appears on the display



Press the button and alter the temperature



**AUTO** Press the **AUTO** button -  
**AUTO** = automatic programme sequence

Note:

Program the temperatures so that TEMP 3 is always higher than TEMP 2 and TEMP 2 is always higher than TEMP 1.

### Factory programmes P1 - P4

The factory programmes are oriented to the calendar week and have been adapted to suit different ways of life. They can be altered according to specific requirements.

### 4 user-defined programmes

The 4 factory programmes can be edited to suit your specific requirements.

### 6 operating modes:

#### AUTOmatic mode

The chronostat operates in accordance with one of the four factory programmes or the user-defined programme in this mode.

### 3 continuous temperature modes

A single temperature is assigned to each of the TEMP 3, TEMP 2 and TEMP 1 modes. The programmed temperature is maintained until another mode is selected or the unit is switched off.

#### PARTY mode

Switches to temperature level 3 (factory setting: 21°C) for a three-hour period.

#### HOLIDAY mode

This mode remains active for the specified number of days and then returns to the previously selected programme.

•	Factory programme	<b>P1</b>	Page 15
•	Factory programme	<b>P2</b>	Page 16
•	Factory programme	<b>P3</b>	Page 17
•	Factory programme	<b>P4</b>	Page 18
•	User-defined programme		Page 20
•	AUTO mode		Page 24
•	TEMP 3 mode		Page 25
•	TEMP 2 mode		Page 25
•	TEMP 1 mode		Page 25
•	PARTY mode		Page 26
•	HOLIDAY mode		Page 27

Factory program P1 is a **daytime and evening programme**, i.e. the programme has been designed in such a way that a constant, comfortable temperature prevails during the day and in the evening.

Changing the time and temperature:  
Example with factory settings for the temperature levels



TEMP 3 = 21° C

TEMP 2 = 17° C

Monday to Thursday  
from 6:00 - 22:00 h TEMP 3  
from 22:00 - 6:00 h\* TEMP 2  
\*(the following morning)

Friday  
from 6:00 - 23:00 h TEMP 3  
from 23:00 - 6:00 h\* TEMP 2  
\*(the following morning)

Saturday and Sunday  
from 7:00 - 23:00 h TEMP 3  
from 23:00 - 7:00 h\* TEMP 2  
\*(the following morning)

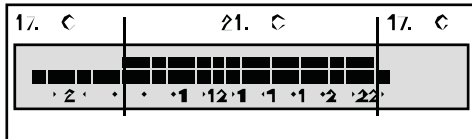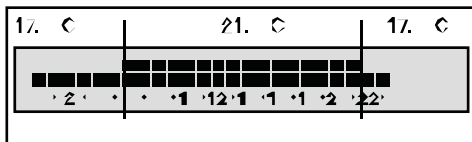

Factory programme P2 is a **full-time working day programme**, i.e. the programme has been designed in such a way that a constant, comfortable temperature prevails at breakfast-time, in the evening and all day at the weekend.

Changing the time and temperature:

Example with factory settings for the temperature levels

TEMP 3 = 21° C

TEMP 2 = 17° C

Monday to Friday

from 6:00 - 9:00 h TEMP 3

from 9:00 - 17:00 h TEMP 2

from 17:00 - 22:00 h TEMP 3

from 22:00 - 6:00 h\* TEMP 2



\*(the following morning, 7:00 h on Saturday)

Saturday and Sunday

from 7:00 - 23:00 h TEMP 3

from 23:00 - 7:00 h\* TEMP 2

\*(the following morning, 6:00 h on Monday)

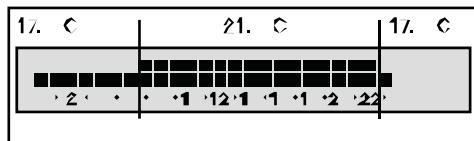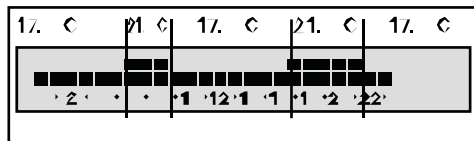

Factory programme P3 is a **working day programme**, i.e. the programme has been designed in such a way that a constant, comfortable temperature prevails at breakfast-time, at lunchtime, in the evening and all day at the weekend.

Changing the time and temperature:

Example with factory settings for the temperature levels

TEMP 3 = 21° C

TEMP 2 = 17° C

Monday to Friday

from 6:00 - 8:00 h TEMP 3

from 8:00 - 11:00 h TEMP 2

from 11:00 - 14:00 h TEMP 3

from 14:00 - 17:00 h TEMP 2

from 17:00 - 22:00 h TEMP 3

from 22:00 - 6:00 h\* TEMP 2



\*(the following morning, 7:00 h on Saturday)

Saturday and Sunday

from 7:00 - 23:00 h TEMP 3

from 23:00 - 7:00 h\* TEMP 2

\*(the following morning, 6:00 h on Monday)

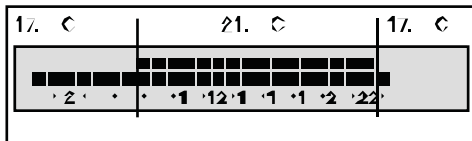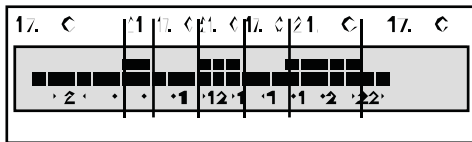

Factory programme P4 is a **weekend house programme**, i.e. the programme has been designed in such a way that a constant, comfortable temperature prevails during the second half of the day on Friday and all day at the weekend.

Changing the time and temperature:

Example with factory settings for the temperature levels

TEMP 3 = 21°C

TEMP 2 = 17°C

TEMP 1 = 5°C

Monday to Thursday  
TEMP 1 24 hours a day

Friday

from 12:00 - 18:00 h TEMP 2

from 18:00 - 23:00 h TEMP 3

from 23:00 - 6:00 h\* TEMP 2

\*(the following morning)

Saturday

from 6:00 - 23:00 h TEMP 3

from 23:00 - 6:00 h\* TEMP 2


\*(Sunday)


Sunday

from 6:00 - 23:00 h TEMP 3

from 23:00 - 12:00 h\* TEMP 1

\*(Friday)

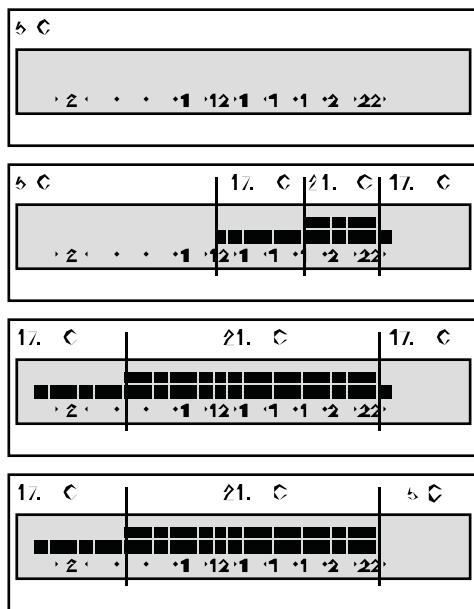


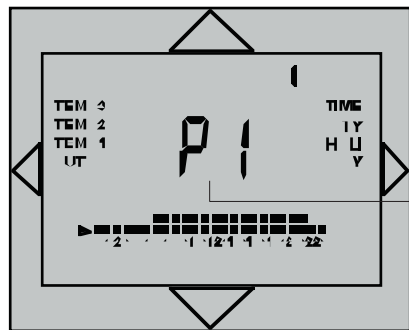

Press the **P 1 - 4** button  
Select the factory programme of your choice

The selected factory programme appears on the display

The display returns to its original state automatically if no buttons are pressed for approx. 8 seconds

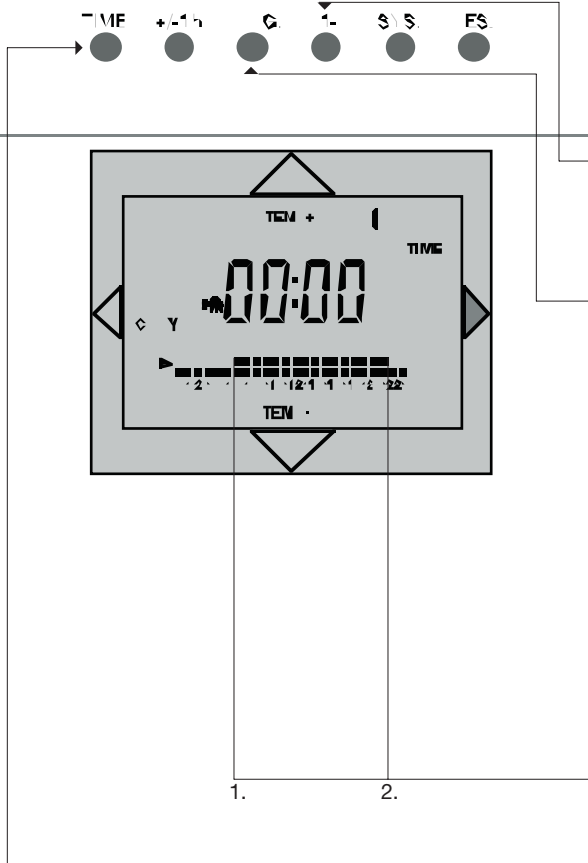

The user-defined programme is a modified factory programme. Let us assume that you wish to read or modify factory programme P1, for example.

Press the **P 1 - 4** button and select factory programme P1

Press the **PROG.** button 1x  
1 = Monday appears on the display


**TIME** Keep the **TIME** button pressed until the first time 5:00 appears

**TIME** Keep the **TIME** button pressed until the second time 22:00 appears, etc.

Press the **PROG.** button 1x  
2 = Tu appears on the display, etc.

Times for temperature changes

To terminate selection / reading: press the **TIME** button -

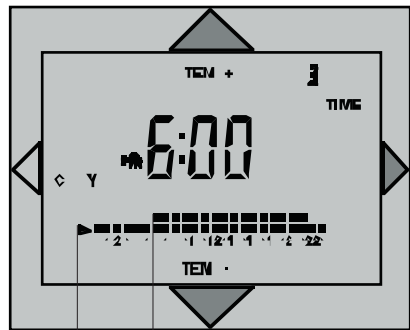**Note:**

The shortest interval between two changes in temperature must be 1 hour. Up to 8 temperature changes are permitted in any one day. ---:-- appears on the display if you attempt to enter more than 8 changes.

Monday to  
Thursday

Friday

Saturday and  
Sunday

Example:

Adapt the programme (P1) to suit your requirements in the following manner: you wish to lower the temperature to 17°C for the whole day on Wednesday.

Press the **P1 - 4** button until P1 appears on the display

Press the **PROG.** button 3x

 = We appears on the display

TIME

Keep the **TIME** button pressed until the display stops automatically at **6:00** h (temperature change)


The time of the temperature change is displayed

TEMP-

Press the **TEMP.** button 1x


The arrow moves to the bottom row of little boxes = TEMP 2 = 17°C

The top row of boxes disappears.

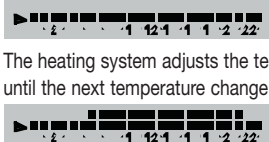

Wednesday

 
The heating system adjusts the temperature to 17°C until the next temperature change the following morning.



Thursday

To terminate your inputs: press the **TIME** button

TIME +/-1h PROG. P 1-4 SYS. RES.

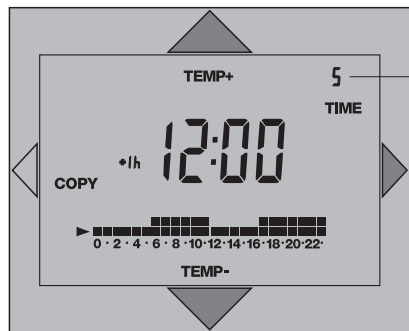

Monday to Thursday

Friday

Saturday and Sunday

Example:

Adapt the programme (P1) to suit your requirements in the following manner: you wish to lower the temperature to 17 °C between 12:00 h and 17:00 h on Friday.

Press the **P1 - 4** button until P1 appears on the display

Press the **PROG.** button 5x  
**5 = We** appears on the display

**TIME** Keep the **TIME** button pressed until the time **12:00** h appears on the display

**TEMP-** Press the **TEMP.** button 1x  
 The arrow moves to the bottom row of little boxes = TEMP 2 = 17 °C  
 Part of the top row of boxes disappears.

**TIME** Keep the **TIME** button pressed until **17:00** h appears on the display


**TEMP+** Press the **TEMP.** button 1x  
 The arrow moves to the top row of little boxes = TEMP 3 = 21 °C

**TIME** Keep the **TIME** button pressed until **23:00** h appears on the display

**TEMP-** Press the **TEMP.** button 1x  
 The arrow moves to the bottom row of little boxes = TEMP 2 = 17 °C

To terminate your inputs:  
 press the **TIME** button 1x

TIME +/-1h PROG. P 1-4 SYS. RES.

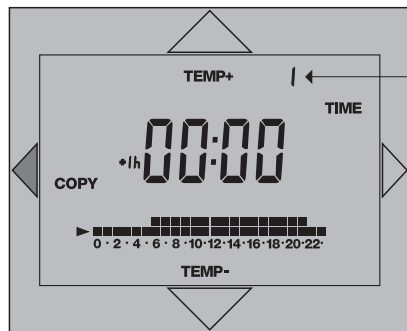

Example:

You have programmed day 1  
If you wish to adopt the same daily programme for subsequent days, press the

COPY button

COPY day 1 to day 2 - COPY to day 3, etc.


The selected day appears on the display

**Note:**

**Bear in mind that the last temperature programmed for the copied day continues to apply until a different temperature is programmed on one of the following days. Always check the entered programme day by day, as described in Page 20.**

Press the **TIME** button


The unit returns to its automatic programme sequence.

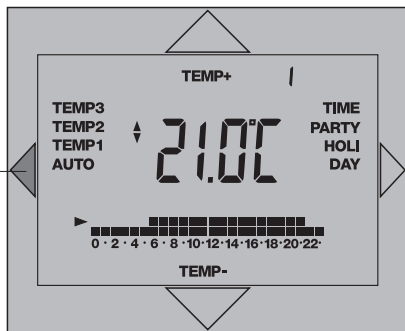

The chronostat operates in accordance with one of the four factory programmes or the user-defined program in this mode.

AUTO Press the **AUTO** button

Display Selected mode  
**AUTO** flashes on the display

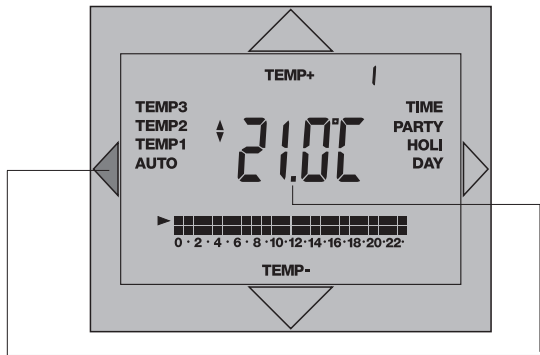

6.8 TEMP 3 mode

6.9 TEMP 2 mode

6.10 TEMP 1 mode

A single temperature is assigned to each of the continuous temperature modes. The programmed temperature is maintained until another mode is selected.

**AUTO** Press the **AUTO** button and select a temperature level

- TEMP3 21 °C
- TEMP2 17 °C
- TEMP1 5 °C

(Factory settings)


Display Selected mode  
 Example:  
**TEMP 3** flashes on the display

Display Shows the set temperature  
 Example:  
**21.0°C**

The current room temperature is displayed after approx. 8 seconds

If you wish to return to the automatic programme sequence:

**AUTO** press the **AUTO** button until **AUTO** starts flashing on the display

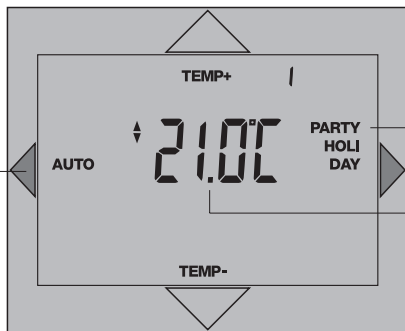

PARTY

Switches to temperature level 3 (factory setting: 21 °C) for a three-hour period.

Press the **PARTY** button **2x**

**PARTY** starts flashing on the display

The programmed room temperature appears on the display

TEMP+  
TEMP-

Press the ... button and enter the desired temperature

The current room temperature is displayed after approx. 8 seconds


**The unit returns to the automatic programme sequence after 3 hours in PARTY mode**

If you wish to terminate PARTY mode prematurely:

press the **AUTO** button

The unit returns to the automatic programme sequence

This mode remains active for the specified number of days and then returns to the previously selected programme.

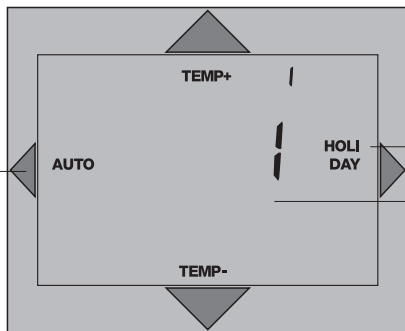

HOLIDAY

Press the **HOLIDAY** button **3x**

**HOLIDAY**

**HOLIDAY** starts flashing on the display

The first day of the holiday period appears on the display

HOLIDAY

Example:

Press the **HOLIDAY** button **1x**  
= **2 days holiday**

TEMP+  
TEMP-

Press the ... button and select the temperature (not possible when OFF, refer to Page 28)

Holiday mode continues running for the specified number of days

To terminate HOLIDAY mode prematurely:  
press the **AUTO** button  
The unit returns to the automatic programme sequence

• **The necessary settings must be specified on site when the system is put into operation for the first time.**

• You can use the system settings to adapt the chronostat to suit your specific requirements.

• Refer to Page 29 for information concerning inputs (Parameter settings)

#### • **Factory settings**

• Heating or cooling mode

• The set value for temperature 1 is active (factory setting 5 °C provides protection against freezing)

• The system is switched off if TEMP 1 is active in AUTOMatic or continuous temperature mode. The same applies to HOLIDAY mode.

• **There is no protection against freezing.**

• Proportional control response

• Simple control response (similar to that of a bimetal controller)

HEAT COOL


TEMP 1

OFF

PROP

ON / OFF

TIME +/-1h PROG. P 1-4 SYS. RES.

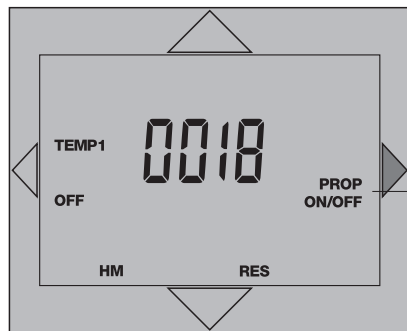

Press the **SYS.** button 1x

The active system settings start flashing.  
The display returns to its original state automatically if no buttons are pressed for approx. 8 seconds

PROP

Press the **PROP** button and change the settings  
Example: switchover between proportional and simple control response

Display **PROP**

Display **ON/OFF**

To terminate programming:  
press the **TIME** button 1x

Recommended settings	Setting
Direct electric heating	1 or 2
Supplementary electric bathroom radiator	2 or 3
Single-room control system with electrically operated radiator valves (hot-water heating) Small to medium-sized rooms	3 or 4
Single-room control system with electrically operated radiator valves (hot-water heating) Medium to large rooms	4 or 5
Wall-mounted gas-fired boiler for single-storey heating systems	4 or 5
Free-standing gas-fired boiler or oil-fired boiler for larger living modules	4, 5 or 6

Setting	1	2	3	4	5	6
Cycle time 1 x ON - 1 x OFF in minutes	4	8,5	13	17	21	25,5

The heating cycle setting is used for adaptation to the controlled system. This is affected by the following:

- room size
- type of heating (convector heaters, single-storey heating systems)
- installation location
- temperature controller/thermostat

The setting range extends from 1 to 6. If the temperature in a room changes too dramatically, e.g. as a result of ventilating, then the cycle may be terminated prematurely or the system may be switched on again.


If the difference in temperature within a room is too great, the system does not switch ON and OFF sufficiently frequently, i.e. a lower CDF value must be selected.

If the system switches too often, a correspondingly higher CDF value must be selected.

**Factory setting: CDF = 4**

(4x 4 min. 15 s = 17 min.)

TIME +/-1h PROG. P 1-4 SYS. RES.

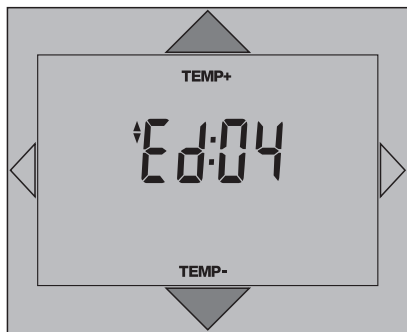

Press the **SYS.** button 2x


The display returns to its original state automatically if no buttons are pressed for approx. 8 seconds



Press the ... button and change the settings

Setting	1	2	3	4	5	6
Cycle time 1 x ON - 1 x OFF in minutes	4	8,5	13	17	21	25,5

To terminate programming:  
press the **TIME** button

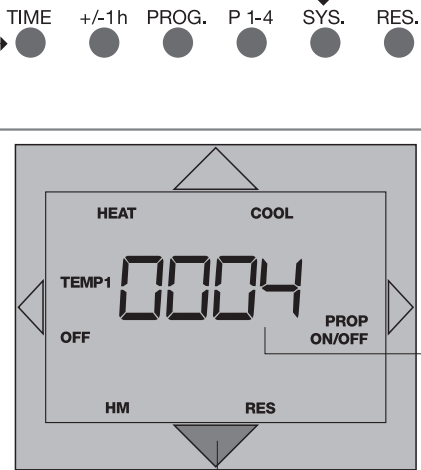

Press the **SYS.** button

The display returns to its original state automatically if no buttons are pressed for approx. 8 seconds


The display shows the full hours during which the heating / cooling system was switched on.

RES

Press the **RES** button to reset to 0000

To terminate programming:  
press the **TIME** button

TIME +/-1h PROG. P 1-4 SYS. RES.

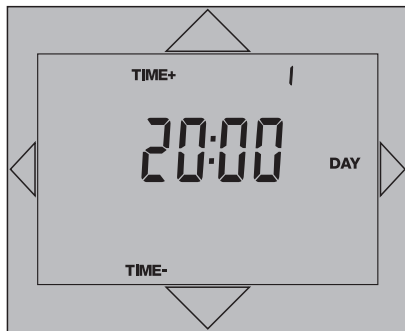


## 7.5 RESET

Press the **RES.** button

The chronostat reverts to a defined operating state and resets the current time to Monday 20:00 h.

Refer to Page 9 for information concerning setting the time / date

TIME +/-1h PROG. P 1-4 SYS. RES.

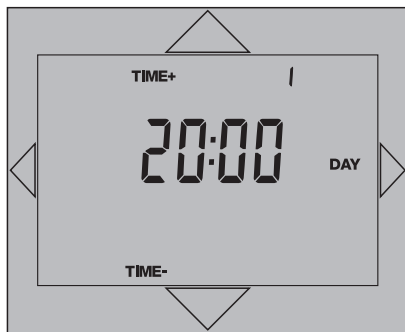

This function recalls factory programmes P1 - 4 and the factory settings for the temperature levels and resets the current time to Monday 20:00 h. It also erases all user-defined settings.

Press the **PROG.** button and keep it pressed

Press the **RES.** button

Release the **RES.** button

Release the **PROG.** press down key until 20:00 h appears in the display

- Refer to Page 9 for information concerning setting the time / date
- Refer to Page 15 for information concerning selecting factory programmes or
- Refer to Page 21 for information concerning entering a user-defined programme


The electronic interlock prevents unintentional or unauthorized modifications to the programmes. The temperature can be changed slightly by +/- 3 degrees. It is also possible to interrogate the current time.

Press the **SYS.** button 1x


Press the **+/-1h** button 1x

**Enable - repeat the procedure**

The display indicates interlock on/off

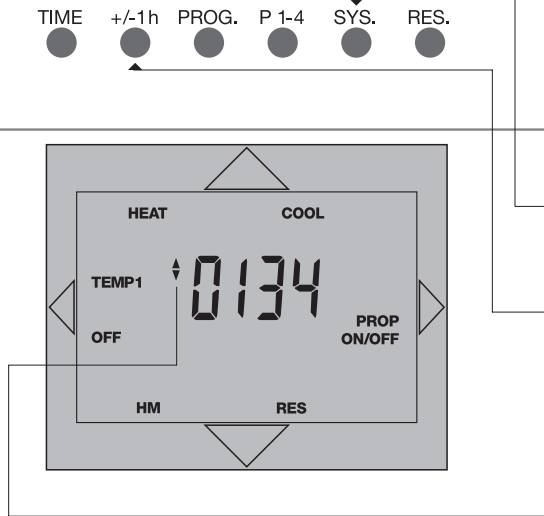

If the unit is used in cooling mode, the temperature ranges are subject to the following limits:

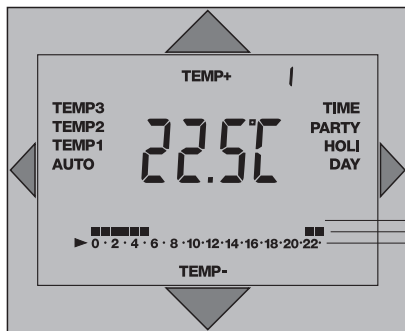

#### Cooling mode

	Factory setting	Setting range
TEMP 3	32° C	27° C ... 35° C
TEMP 2	27° C	24° C ... 29° C
TEMP 1	23° C	15° C ... 26° C

#### Note:

In cooling mode, the air-conditioning system is switched on the least number of times with TEMP 3 (highest temperature). The air conditioner cools to the greatest extent with TEMP 1. This factor has been taken into consideration in factory programs P1 - 4 by swapping TEMP 3 and TEMP 1 over compared with heating mode. OFF cannot be set in cooling mode (refer to Page 28)

Dimensions H x W x D (mm)	134 x 81 x 33
Weight	approx. 200 g
Operating voltage	battery, type 2x LR 6 / AA
Switching capacity:	
- resistive load	5 A / 250 V~
- inductive load	
cos φ 0.6	1 A / 250 V~
Switching output	floating
Switching contact	1 changeover contact
Ambient temperature	- 5°C to + 45 °C
Class of protection	II
Accuracy	typ 2.5 s / day at + 25 °C
Reserve power	2 min. to replace the batteries
Battery life	1 year
Shortest switching period:	
- daily program	1 h
- weekly program	1 h
Programmable every	15 min.
Switching preselection	yes

**Switching state display and operating modes:**

Heating mode	Flame symbol
Cooling mode	Fan symbol
Automatic mode	AUTO
Continuous mode	TEMP 1, TEMP 2 or TEMP 3
Party mode	PARTY
Holiday mode	HOLIDAY
Type of installation	Surface-mounted
Type of connection	Screw-type terminals, each 2.5mm <sup>2</sup>
Temperature	
Heating control range	+ 5°C to + 35°C
Temperature	
Cooling control range	+ 15°C to + 35°C
Protection against freezing	TEMP 1 setting (factory setting: 5°C)
Differential temperature gap	+/- 0.25 at 0.4 K *
Feedback	Electronic
Degree of protection	IP 20

\* Greater fluctuations are possible as a result of the heating system and the heated room.

## Problem:

1. Operator control restricted at low voltage, i.e. whenever the battery symbol appears on the display. It is no longer possible to activate factory programs. Data entered during programming is not stored.
2. It is not possible to edit data
3. It is not possible to set the value for the temperature level
4. The heating system takes too long to reach the set temperature
5. The heating system switches too frequently
6. The wrong key has been pressed or incorrect values have been entered during programming.

## Remedy:

1. Replace the battery Page 7
2. The interlock is active Page 35
3. Select values within the setting range Page 12
4. Check that the correct CDF value has been entered Page 31
5. Check that the correct CDF value has been entered Page 31
6. Cancel the operation:  
Press the TIME button or the AUTO button on the display to start again


Use a dry cloth to clean the unit.  
Never use any caustic cleaning agents.

### 11. Service addresses

Grässlin GmbH & Co. KG  
FEINWERKTECHNIK  
Postfach 1232  
D-78104 St. Georgen/Schw.  
Telephone ++49(0)7724/933-0  
Telefax ++49(0)7724/933-240


Key word	page	Key word	page
<b>Arrow buttons</b>	41	Heating mode	28
AUTO automatic programme sequence	42	Heating systems	30
<b>Basic programmes</b>	03	HM	42
Batteries	07	HOLIDAY mode	27
Brief description	03	Holiday mode	27
Buttons	41	<b>Installation</b>	05
<b>CDF value</b>	30 - 31	Interrogating the time	11
Cleaning and maintenance	39	<b>List of dealers</b>	39
Clips	05	<b>Mounting</b>	05
Connections	06	<b>Overview</b>	41 - 42
Continuous temperatures	25	<b>Parameters</b>	29
Control elements	41	PARTY mode	26
Control response	28	Power supply	07
COOL	42	Problems and remedies	38
Cooling mode´	28	Protection against freezing	12 / 28
COPY	23	<b>RES</b>	33 / 42
Copy function	23	RESET	33
Cycle times	30	Room temperature	42
<b>Diagram</b>	06	<b>Service</b>	39
Display	42	Setting the time	09
Displays	42	Stand	05
<b>Elapsed-hour meter</b>	32	Summertime	10
Electronic interlock	35	System settings	28
Elementary operator control	04	<b>Technical data</b>	37
Entering / editing programmes	2	TEMP	42
Entering the date	09	Temperature levels	12
Erasing settings	34	TIME	42
<b>Factory programmes</b>	15 - 18	Time setting	09
Factory settings	12 / 14 / 34	<b>User-defined programme</b>	20
Faults	38	<b>Wintertime</b>	10
<b>HEAT</b>	42		

TIME +/-1h PROG. P 1-4 SYS. RES.

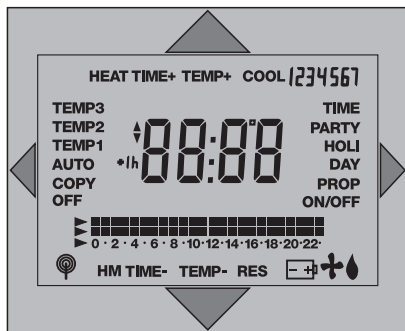

13. Overview / control elements

TIME	Setting the current time Confirming inputs
+/- 1h	Setting and changing over between summertime and wintertime
PROG.	Recalling, reading and editing the programme
P 1-4	Selecting the factory programmes
SYS.	System settings, Page 28
RES.	Reset to a defined operating state, time Mo 20:00 h
▲	Setting the temperature / time Selecting temperature level / system setting
▼	Setting the temperature / time Selecting temperature level Resetting the elapsed-hour meter
◀	Selecting the operating mode: TEMP 1, TEMP 2, TEMP 3, AUTO, COPY System settings
▶	Interrogating the current time Selecting the PARTY and HOLIDAY modes System settings Selecting the times for temperature changes

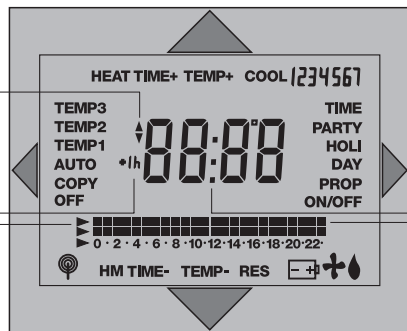

Switching programme in hours

Current temperature level

Temperature / time / prog.

Summertime

Changing the required value

<b>HEAT</b>	Heating mode
<b>COOL</b>	Cooling mode
<b>TIME +</b>	Set the assignment of the TIME button
<b>TEMP+</b>	Set the assignment of the TEMP button
<b>1234567</b>	Indicates the current day of the week
<b>TEMP 3</b>	TEMP 3 mode selected
<b>TEMP 2</b>	TEMP 2 mode selected
<b>TEMP 1</b>	TEMP 1 mode selected
<b>AUTO</b>	Factory programme or user-defined programme running
<b>COPY</b>	Enter the assignment of the COPY button - user-defined programme, Page 23
<b>OFF</b>	System setting, Page 28
<b>TIME</b>	Current time
<b>PARTY</b>	PARTY mode, Page 26
<b>HOLIDAY</b>	HOLIDAY mode, Page 27
<b>PROP</b>	System setting, Page 28
<b>ON/ OFF</b>	System setting, Page 28
<b>HM</b>	Elapsed-hours indicator, Page 32
<b>TIME -</b>	Set the assignment of the TIME button
<b>TEMP-</b>	Set the assignment of the TEMP button
<b>RES</b>	RESET, Page 33
<b>[Battery icon]</b>	Battery status / battery replacement, Page 7
<b>[+]</b>	Cooling mode on/off
<b>[Water drop icon]</b>	Heating mode on/off